



Putting safety first

Installation instruction RFCS Cabinet Seal


Read the whole instruction before installation.


Cutout Pattern in Cabinet

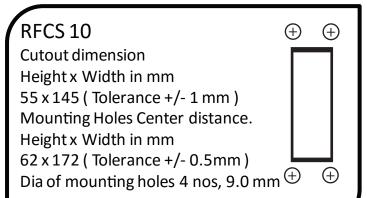


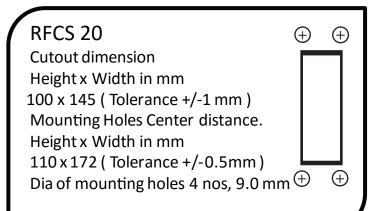




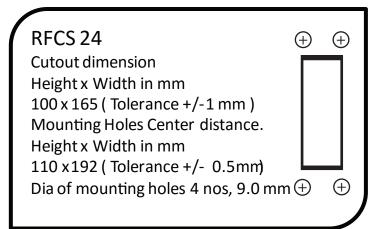


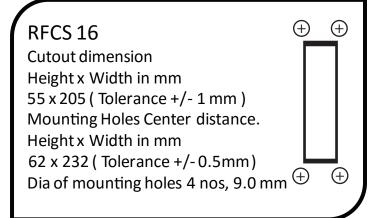

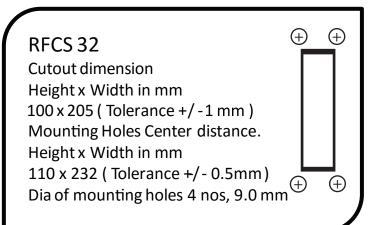

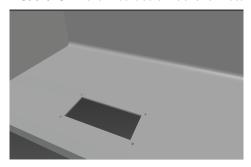


1. Start the installation by ensuring that the cutout made in cabinet correspond to the cutout pattern in the installation manual.

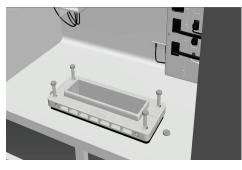

2. Install the frame and gasket directly on the cabinet cutout before installing the cables.



3. Use the cable selector to find the exact diameter of cable by wrapping around the circumference of cable.

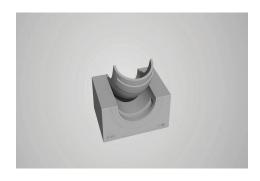


4. Peel off layer from CS module 5. Lubricate carefully the inner until correct cable diameter range is readable on each module half. If required, peel off an extra layer on one of the module half to get a perfect fit against the cable, see "right and wrong" image to the right.



and outer edges of the prepared CS module together with PTG 40 wedge and inner edge of the frame.



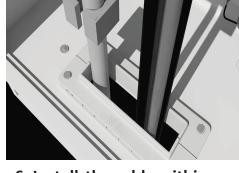

6. Install the cable within the prepared halves of CS module.










7. Install the CS module together with cable from the front until the module rests against the back wall of the frame.

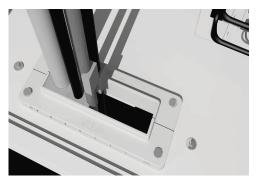


8. Repeat procedure with remaining cables.




9. Fill remaing space with unprepared modules.

Read the whole instruction before installation.

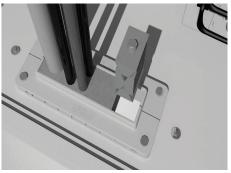


10. Finally insert the PTG 40 wedge.

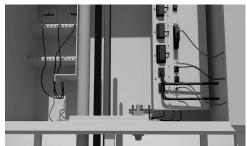

11-12. Tighten the PTG 40 wedge until it is almost even with the frame surface to obtain IP 65/67 rating.



Preterminated cables

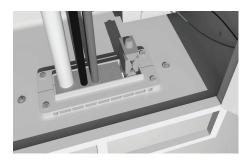


13. PTG 40 wedge can be inserted from both sides of the frame depending on access or client specification.



14. In case of preterminated cables open the RFCS frame in two halves by unscrewing the bolts from the sides.




15. Install the preterminated cables between the two halves of RFCS frame.

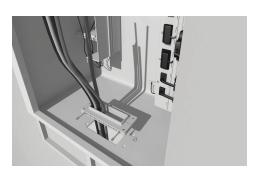

16. Screw together the two halves with middle gasket fixed on one half of the RFCS frame.




17. Install all preterminated cables aftermaking an angular cut in the gasket and secure the gasket on cabinet cut out.

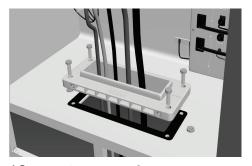


18. Fix the RFCS frame together with back gasket on the cabinet cutout by tightening with mounting hardware.

Complete the installation as shown from picture 3.


Re-installation

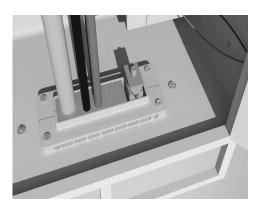

19. For reinstallation remove the PTG 40 wedge.

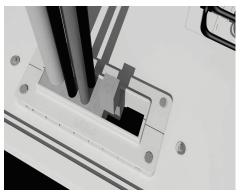

20. Remove all the unprepared CS modules from the frame.

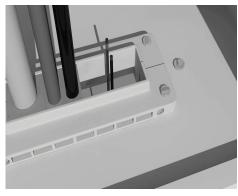

21. Install the new cables and complete the installation as shown from picture 3.



Sweden

Head office MCT Brattberg AB Phone: +46 - 455 37 52 00 Email: info@mctbrattberg.se

SE-371 92 Karlskrona, Sweden

Australia

MCT Brattberg Australia Pty Ltd Phone: +61 (0)44 710 4422 Email: info@mctbrattberg.com.au

Level 2, Margaret Graham Building Lot Fourteen 1a Frome Road Adelaide, SA 5000, Australia

United Kingdom

MCT Brattberg Ltd Phone: +44 - 170 624 4890 E-mail: info@mctbrattberg.co.uk

Address

Commerce Street Carrs Industrial Estate Haslingden Lancashire BB4 5JT, England

United Arab Emirates

MCT Brattberg UAE Dubai, United Arab Emirates Phone: +971 50 277 2151 Email: sony.jose@mctbrattberg.ae

USA

MCT Brattberg Inc Phone: +1 346 260 9124 Email: sales@brattberginc.com

Address 3332 Spring Stuebner Rd. Suite G, Spring, TX 77379, USA

MCT Brattberg India Email: operations@mctbrattbergindia. Phone: +91-11-49059872 Mobile: +919811540480 (Enish Bahl)

Address India Building E 46/10 Ground floor Okhla industrial area phase 2 New Delhi-110020, India

we are putting safety first

MCT Brattberg Canada Ltd

Vancouver, BC, Canada Email: sales@mctbrattberg-can.com